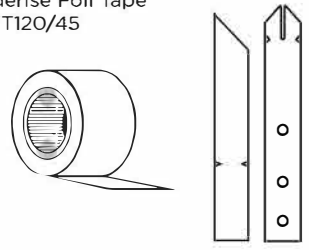
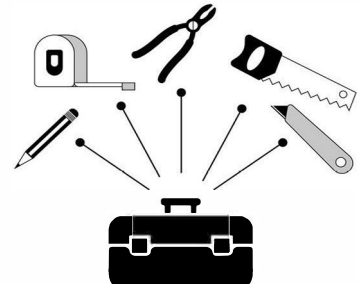
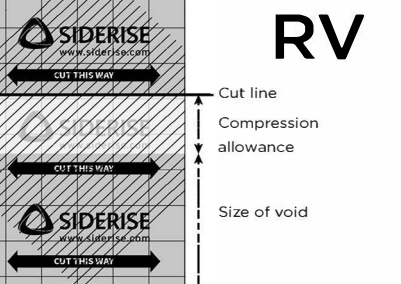

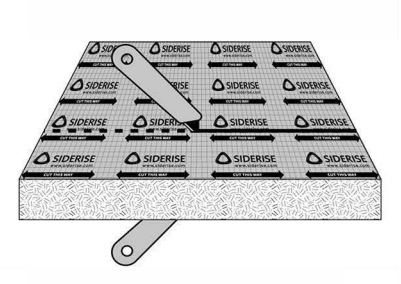
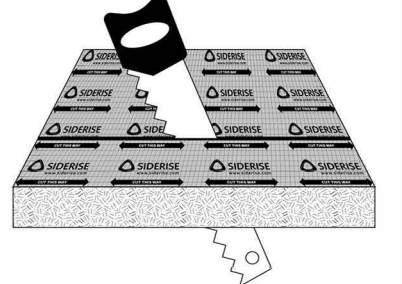
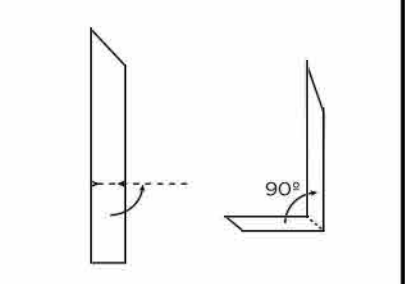
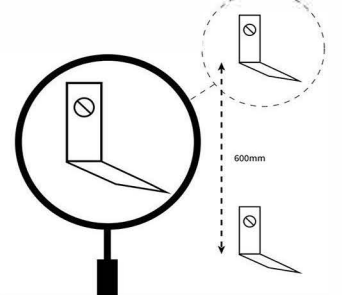
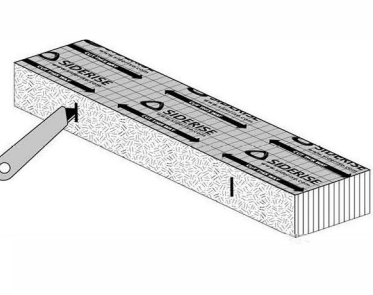
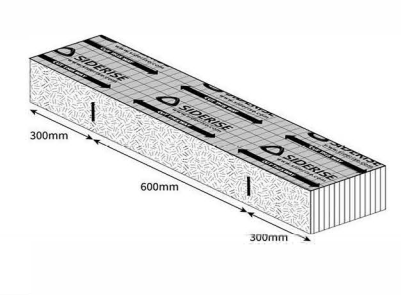
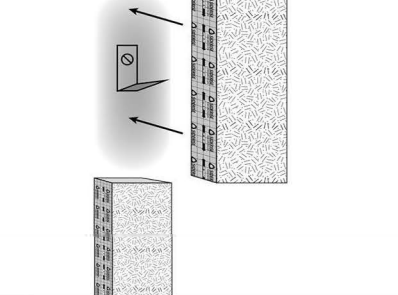
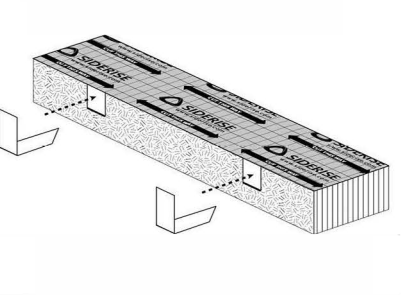
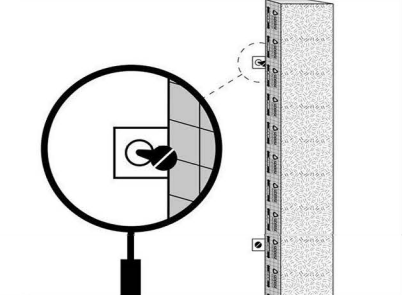
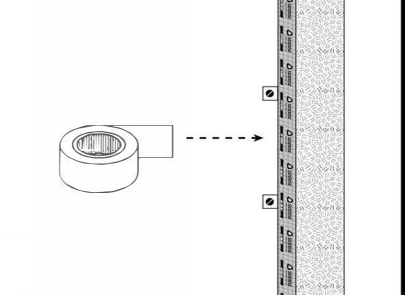
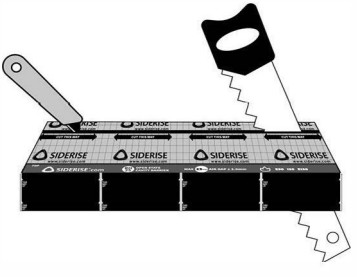
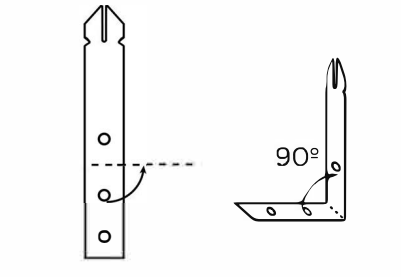
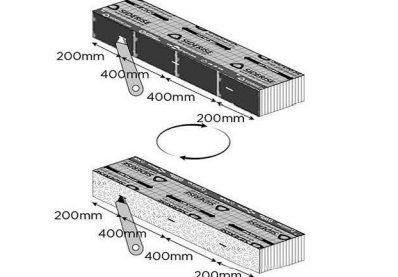
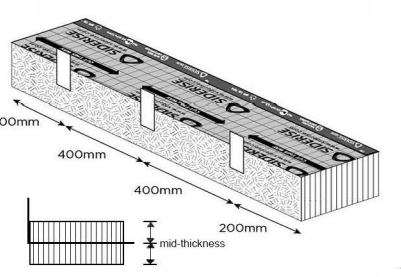
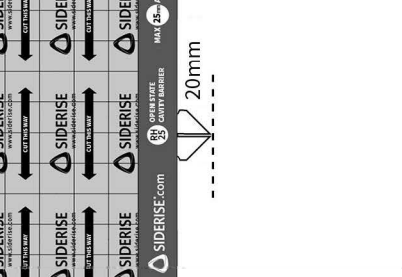
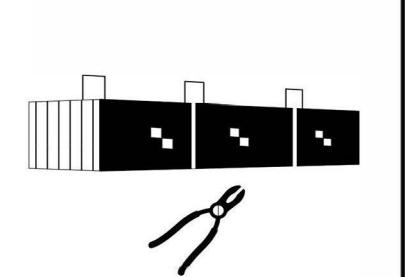
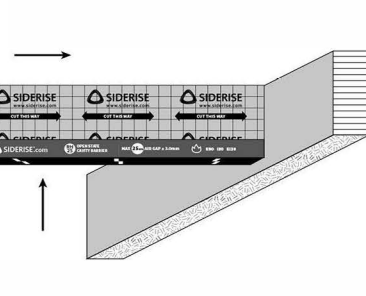
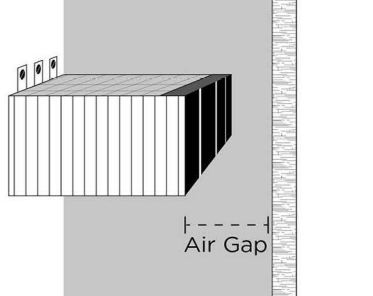
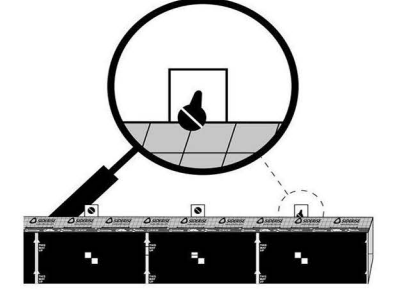
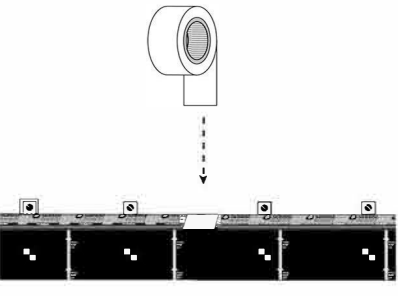
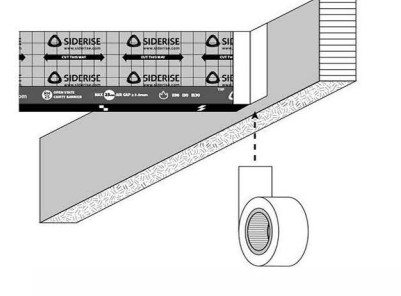
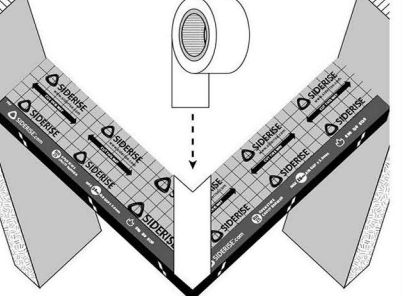
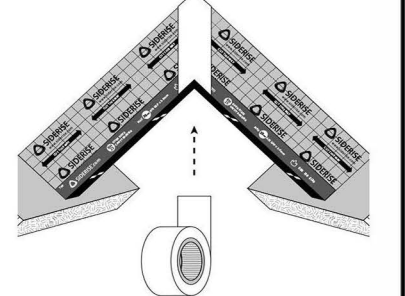
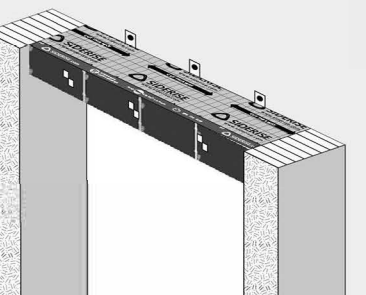
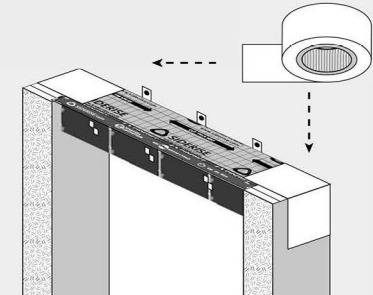
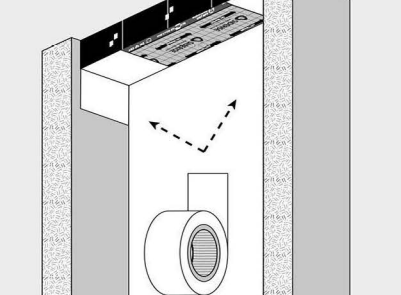
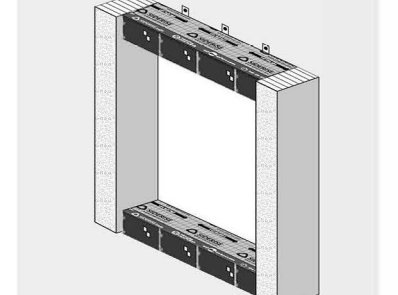
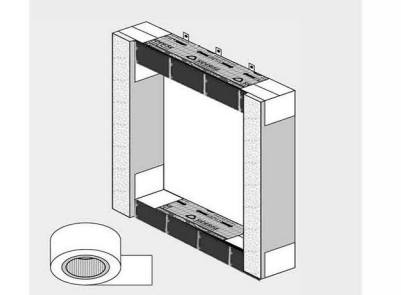
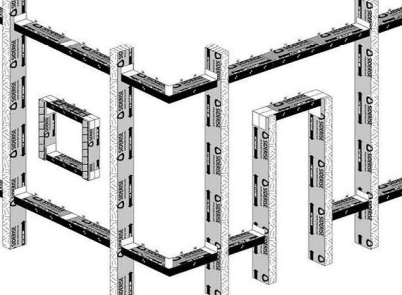

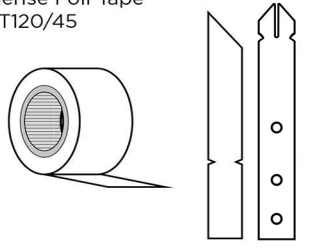
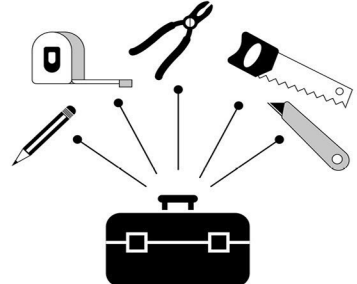
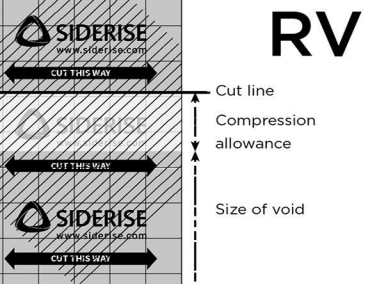

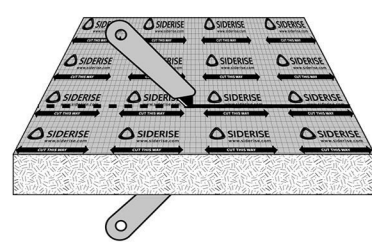
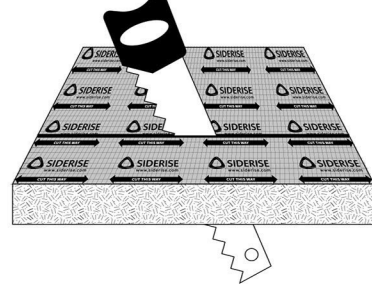
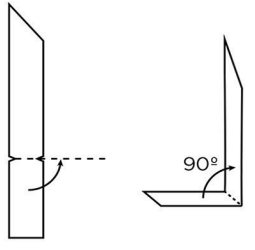
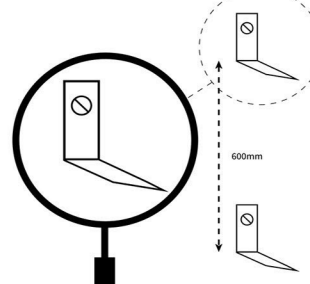
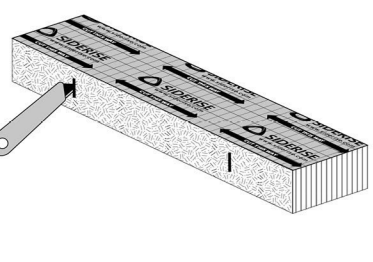
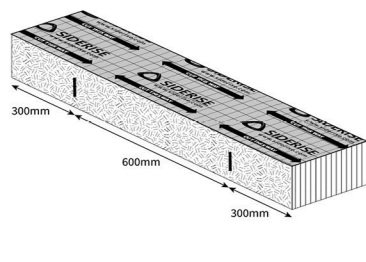
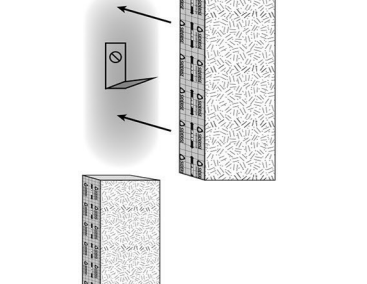
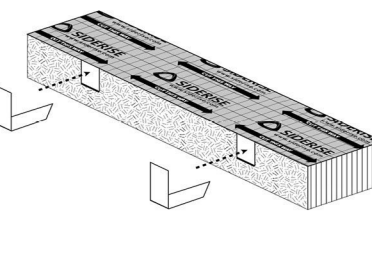
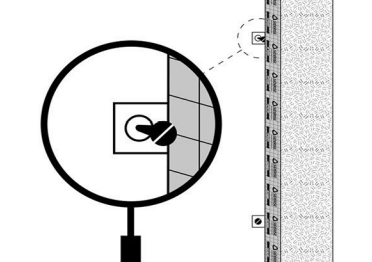
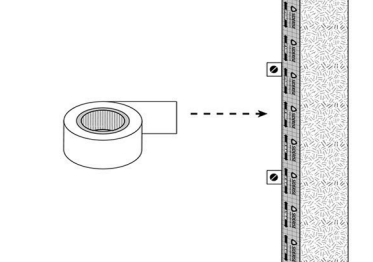
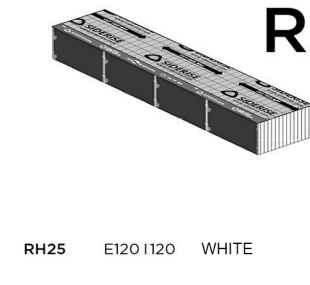
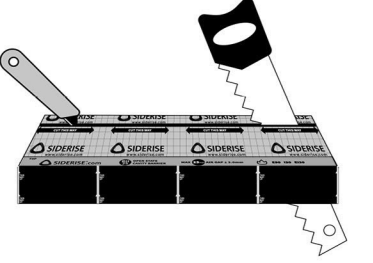
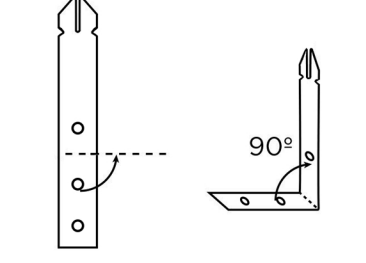
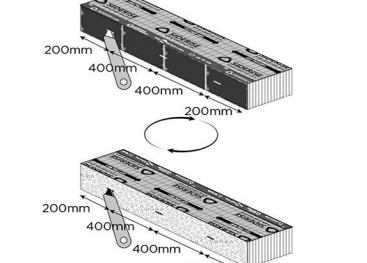
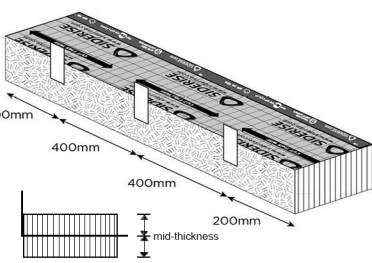
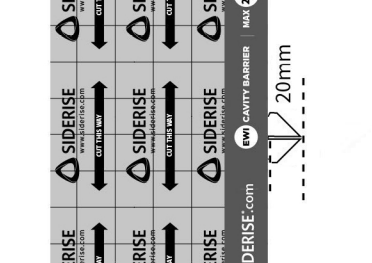
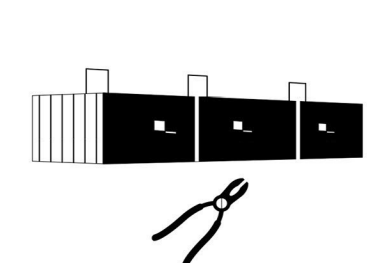
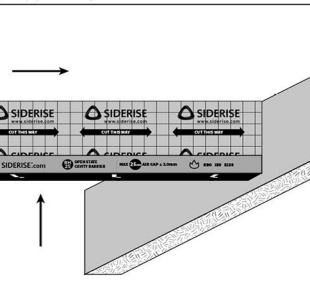
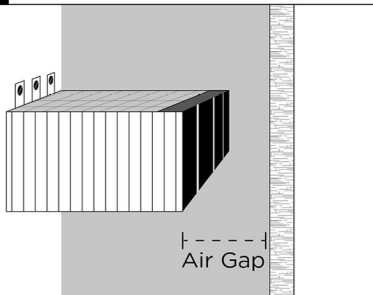
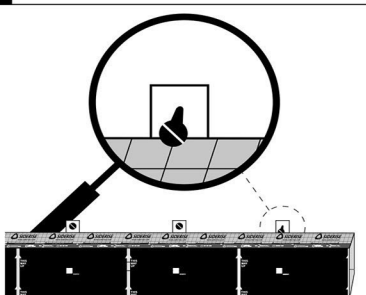
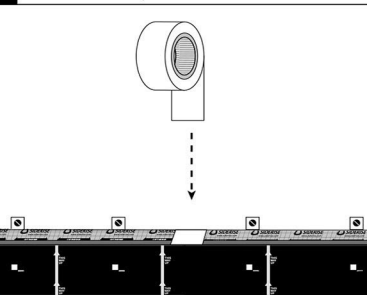
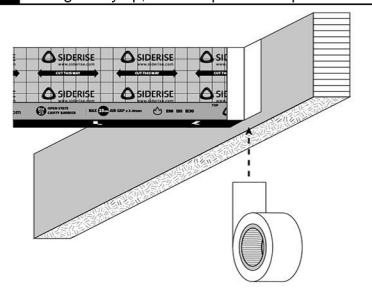
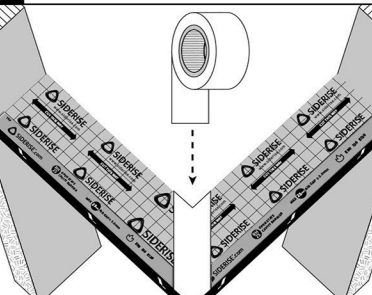
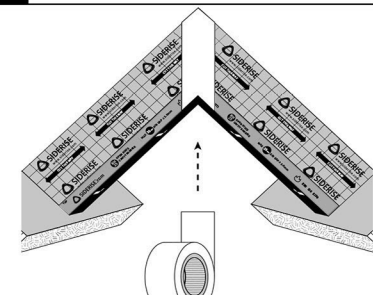
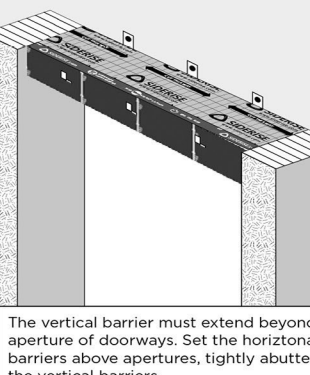
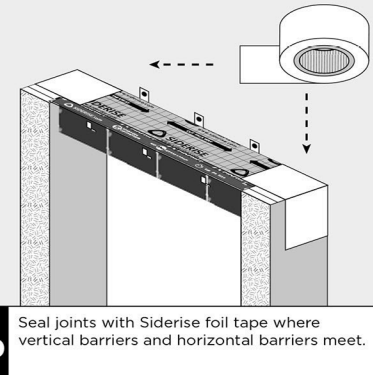
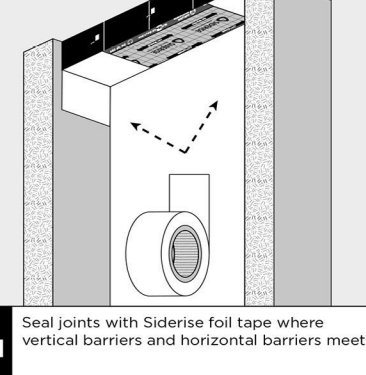
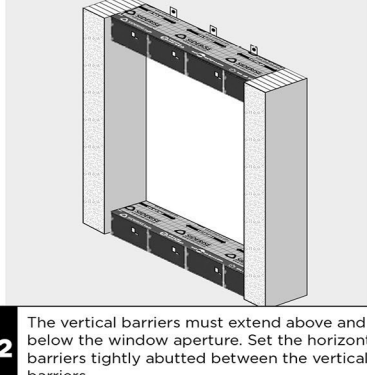
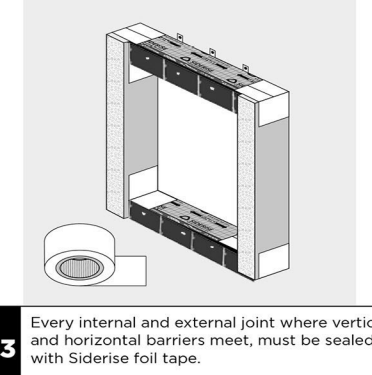
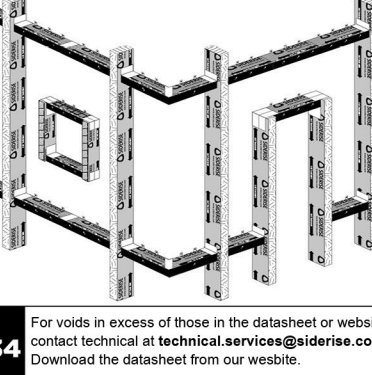


<div>Siderise Foil Tape RFT120/45</div> 		<div>RV</div> 																									
<div>1 You need: RV Fixing Brackets, RH Fixing Brackets, Foil Tape 120/45. Non combustible mechanical fixing appropriate to substrate, supplied by contractor.</div>	<div>2 Cutting on site, tools required: Marker, tape measure, sharp knife, serrated blade, pliers.</div>	<div>3 Measure and mark the sheet: size of the void plus compression allowance as stated in the data sheet: 10% for voids up to 50mm and 10mm for voids greater than 50mm.</div>	<div>4 Cut in the direction that is marked on the foil face of the RV sheet.</div>	<div>5 Use a sharp knife to cut through the foil facings on both sides.</div>	<div>6 Cut the stone wool with a saw, being careful not to rip the foil facing.</div>	<div>7 2 brackets are needed for each RV barrier. Fixing brackets are supplied flat for folding site. The bracket can be trimmed to ensure it is 75% of the width of the barrier.</div>																					
																											
<div>8 Brackets can be installed in two main ways: 1. Set brackets on the wall at 600mm centres.</div>	<div>9 Make 2 vertical incisions in the reverse of the barrier with a sharp knife.</div>	<div>10 Your incisions must be at 600mm centres.</div>	<div>11 Press barrier onto brackets ensuring it is tightly abutted to the barrier below and above.</div>	<div>12 Alternatively, insert the brackets into the RV barrier then fix to the wall. This time the incisions must be in horizontal orientation.</div>	<div>13 Mechanically fix the brackets to the wall, ensuring the barrier is tightly abutted to the barrier below and above.</div>	<div>14 Seal joints between abutting barriers with Siderise foil tape on both sides.</div>																					
<div>RH</div> <table><tr><td>RH25</td><td>E90 I30</td><td>GREEN</td></tr><tr><td>RH25</td><td>E60 I60</td><td>ORANGE</td></tr><tr><td>RH25</td><td>E90 I60</td><td>PURPLE</td></tr><tr><td>RH25</td><td>E120 I60</td><td>YELLOW</td></tr><tr><td>RH25</td><td>E120 I90</td><td>GREY</td></tr><tr><td>RH50</td><td>E30 I30</td><td>RED</td></tr><tr><td>RH50</td><td>E60 I60</td><td>BLUE</td></tr></table>	RH25	E90 I30	GREEN	RH25	E60 I60	ORANGE	RH25	E90 I60	PURPLE	RH25	E120 I60	YELLOW	RH25	E120 I90	GREY	RH50	E30 I30	RED	RH50	E60 I60	BLUE						
RH25	E90 I30	GREEN																									
RH25	E60 I60	ORANGE																									
RH25	E90 I60	PURPLE																									
RH25	E120 I60	YELLOW																									
RH25	E120 I90	GREY																									
RH50	E30 I30	RED																									
RH50	E60 I60	BLUE																									
<div>15 You need: Siderise® Fixing Brackets, Siderise® Foil Tape FT 120/45, suitable non-combustible mechanical fixings appropriate to substrate, supplied by contractor.</div>	<div>16 Product is ordered to suit project requirements. When ordering, order product to suit site tolerances. Product can be trimmed on site along the back edge to suit required site dimensions.</div>	<div>17 3 brackets are needed for each RH barrier. Manually fold brackets to 90°.</div>	<div>18 Make 3 horizontal incisions at 400mm intervals. This will make it easier to push the bracket through the intumescent layer. Reverse and repeat.</div>	<div>19 Insert the three brackets into the RH barrier at mid-thickness. Bracket flanges must be facing upwards as shown above, ensuring the barrier is the right way up, colour tape to the top.</div>	<div>20 With the notches aligned with the face of the barrier, the split ends will be 20mm</div>	<div>21 The protruding split ends should be trimmed to 10-20mm and counterfolded to retain the product. For RH50-60/60, the split end folded down will need to be trimmed to 20mm to ensure at least 5mm overlap with the intumescent.</div>																					
																											
<div>22 Hold barrier against the wall.</div>	<div>23 Check that the width of the barrier is installed to leave required air gap between the horizontal barrier and the cladding panel.</div>	<div>24 Mechanically fix the brackets to the wall, ensuring the barrier is tightly abutted to the barriers next to it.</div>	<div>25 Seal joints with Siderise foil tape on the top side only. Ensure tape does not extend onto front face / intumescent of the cavity barrier.</div>	<div>26 Where RV and RH barriers meet ensure that they are tightly abutted with RV always taking priority over RH. Seal corners and junctions on the top side only with Siderise foil tape.</div>	<div>27 Carefully cut barrier to ensure mitred edges are tightly abutted and ensuring continuity of intumescent on leading edge.</div>	<div>28 Internal corners may be butt-jointed provided doing so leaves no gaps in the joint. This may require removing the intumescent facing within the joint.</div>																					
						<div>SCAN / CLICK HERE FOR</div> 																					
<div>29 The vertical barrier must extend beyond the aperture of doorways. Set the horizontal barriers above apertures, tightly abutted to the vertical barriers.</div>	<div>30 Seal joints with Siderise foil tape where vertical barriers and horizontal barriers meet.</div>	<div>31 Seal joints with Siderise foil tape where vertical barriers and horizontal barriers meet.</div>	<div>32 The vertical barriers must extend above and below the window aperture. Set the horizontal barriers tightly abutted between the vertical barriers.</div>	<div>33 Every internal and external joint where vertical and horizontal barriers meet, must be sealed with Siderise foil tape.</div>	<div>34 For voids in excess of those in the datasheet or website contact technical at technical.services@siderise.com Download the datasheet from our website.</div>	<div>FURTHER INSTRUCTIONS</div>																					

<p>Siderise Foil Tape RFT120/45</p> 		<p>RV</p>  <p>Cut line Compression allowance Size of void</p>				 <p>90°</p>
<p>1 You need: RV Fixing Brackets, RH Fixing Brackets, Foil Tape 120/45. Non combustible mechanical fixing appropriate to substrate, supplied by contractor.</p>	<p>2 Cutting on site, tools required: Marker, tape measure, sharp knife, serrated blade, pliers.</p>	<p>3 Measure and mark the sheet: size of the void plus compression allowance as stated in the data sheet: 10% for voids up to 50mm and 10mm for voids greater than 50mm.</p>	<p>4 Cut in the direction that is marked on the foil face of the RV sheet.</p>	<p>5 Use a sharp knife to cut through the foil facings on both sides.</p>	<p>6 Cut the stone wool with a saw, being careful not to rip the foil facing.</p>	<p>7 2 brackets are needed for each RV barrier. Fixing brackets are supplied flat for folding site. The bracket can be trimmed to ensure it is 75% of the width of the barrier.</p>
 <p>600mm</p>		 <p>300mm 600mm</p>				
<p>8 Brackets can be installed in two main ways: 1. Set brackets on the wall at 600mm centres.</p>	<p>9 Make 2 vertical incisions in the reverse of the barrier with a sharp knife.</p>	<p>10 Your incisions must be at 600mm centres.</p>	<p>11 Press barrier onto brackets ensuring it is tightly abutted to the barrier below and above.</p>	<p>12 Alternatively, insert the brackets into the RV barrier then fix to the wall. This time the incisions must be in horizontal orientation.</p>	<p>13 Mechanically fix the brackets to the wall, ensuring the barrier is tightly abutted to the barrier below and above.</p>	<p>14 Seal joints between abutting barriers with Siderise foil tape on both sides.</p>
<p>RH</p>  <p>RH25 E120 I120 WHITE</p>		 <p>90°</p>	 <p>200mm 400mm 200mm</p>	 <p>200mm 400mm 200mm</p>	 <p>20mm</p>	
<p>15 You need: Siderise® Fixing Brackets, Siderise® Foil Tape FT 120/45, suitable non-combustible mechanical fixings appropriate to substrate, supplied by contractor.</p>	<p>16 Product is ordered to suit project requirements. When ordering, order product to suit site tolerances. Product can be trimmed on site along the back edge to suit required site dimensions.</p>	<p>17 3 brackets are needed for each RH barrier. Manually fold brackets to 90°.</p>	<p>18 Make 3 horizontal incisions at 400mm intervals. This will make it easier to push the bracket through the intumescent layer. Reverse and repeat.</p>	<p>19 Insert the three brackets into the RH barrier at mid-thickness. Bracket flanges must be facing upwards as shown above, ensuring the barrier is the right way up, colour tape to the top.</p>	<p>20 With the notches aligned with the face of the barrier, the split ends will be 20mm. Trim off one of the split ends.</p>	<p>21 The remaining leg of the split end must be folded upwards to capture the intumescent. The leg must not be folded downwards.</p>
	 <p>Air Gap</p>					
<p>22 Hold barrier against the wall.</p>	<p>23 Check that the width of the barrier is installed to leave required air gap between the horizontal barrier and the cladding panel.</p>	<p>24 Mechanically fix the brackets to the wall, ensuring the barrier is tightly abutted to the barriers next to it.</p>	<p>25 Seal joints with Siderise foil tape on the top side only. Ensure tape does not extend onto front face / intumescent of the cavity barrier.</p>	<p>26 Where RV and RH barriers meet ensure that they are tightly abutted with RV always taking priority over RH. Seal corners and junctions on the top side only with Siderise foil tape.</p>	<p>27 Carefully cut barrier to ensure mitred edges are tightly abutted and ensuring continuity of intumescent on leading edge.</p>	<p>28 Carefully cut barrier to ensure mitred edges are tightly abutted and ensuring continuity of intumescent on leading edge.</p>
						<p>NB:</p> <p>RH25-120/120 must be installed with a minimum of 50mm stonewool thermal insulation above and below the cavity barrier</p>
<p>29 The vertical barrier must extend beyond the aperture of doorways. Set the horizontal barriers above apertures, tightly abutted to the vertical barriers.</p>	<p>30 Seal joints with Siderise foil tape where vertical barriers and horizontal barriers meet.</p>	<p>31 Seal joints with Siderise foil tape where vertical barriers and horizontal barriers meet.</p>	<p>32 The vertical barriers must extend above and below the window aperture. Set the horizontal barriers tightly abutted between the vertical barriers.</p>	<p>33 Every internal and external joint where vertical and horizontal barriers meet, must be sealed with Siderise foil tape.</p>	<p>34 For voids in excess of those in the datasheet or website contact technical at technical.services@siderise.com. Download the datasheet from our website.</p>	